

Keyfob Quick Start Guide

HT-KF1 / HT-KF1-W



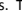 
Congratulations on purchasing your HT-KF1 Keyfob.

The HT-KF1 Keyfob is a professional state-of-the-art product that allows you to arm and disarm your system from anywhere within or just outside your home. Disarming your security system with your Keyfob does not require a key pad code to be entered. The HT-KF1 also provides an emergency alarm function anywhere within range of the TouchScreen.

1 Package Contents

- One HT-KF1 Keyfob with battery (CR2032)
- One Installation Guide


2 Pre-Installation Guidelines

- Slide the battery cover open as shown.
- Remove the clear plastic strip from under the supplied CR2032 3V lithium battery.
- Press and hold the  and  buttons while replacing the battery into the slot (+ side out) and sliding the battery cover closed as shown.
- Release the buttons. The Keyfob is now Defaulted and in Search mode. The LED will flash  green 3 times every 5 seconds. The Keyfob is now ready to be added to the TouchScreen.

3 Adding a Keyfob

- At the Home screen, touch the **Settings** widget.
- At the Settings screen, use the keypad to enter the Installer Code.
- At the Technician Code/ID screen, enter your Technician ID and touch **Done**.



- At the Settings menu, select **Home Devices > Keyfobs > Add a Keyfob**. The Locating Keyfobs screen appears.
- Touch Next**. The system scans the premises for Keyfobs that can be added. Keyfobs must be Defaulted and must not be currently paired with another TouchScreen.
- Follow the system prompts to complete the add process and pair the Keyfob with the TouchScreen.
- When the system finds the Keyfob, press and release any button to pair the Keyfob with the TouchScreen.
- The LED will flash  green 5 times. Congratulations! You have successfully added your Keyfob.

4 Deleting a Keyfob

- Deleting a Keyfob from the premises prevents it from being used to perform actions in your security system. You should delete a Keyfob:
- if the Keyfob is being relinquished by the customer.
 - to reset the Keyfob to factory Default settings by deleting the Keyfob and re-adding it to the TouchScreen immediately.
- To delete a Keyfob from the Touchscreen:
- Perform Steps A through C in Section 3: "Adding a Keyfob".
 - At the Technician Settings menu select **Home Devices > Keyfobs > Delete a Keyfob**. The Remove Keyfob screen appears.
 - Touch the Keyfob icon you want to delete.
 - At the confirmation dialog, touch **Yes** to delete the Keyfob from the TouchScreen.

Keyfob Quick Start Guide

HT-KF1 / HT-KF1-W



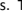 
Congratulations on purchasing your HT-KF1 Keyfob.

The HT-KF1 Keyfob is a professional state-of-the-art product that allows you to arm and disarm your system from anywhere within or just outside your home. Disarming your security system with your Keyfob does not require a key pad code to be entered. The HT-KF1 also provides an emergency alarm function anywhere within range of the TouchScreen.

1 Package Contents

- One HT-KF1 Keyfob with battery (CR2032)
- One Installation Guide

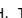 
2 Pre-Installation Guidelines

- Slide the battery cover open as shown.
- Remove the clear plastic strip from under the supplied CR2032 3V lithium battery.
- Press and hold the  and  buttons while replacing the battery into the slot (+ side out) and sliding the battery cover closed as shown.
- Release the buttons. The Keyfob is now Defaulted and in Search mode. The LED will flash  green 3 times every 5 seconds. The Keyfob is now ready to be added to the TouchScreen.

3 Adding a Keyfob

- At the Home screen, touch the **Settings** widget.
- At the Settings screen, use the keypad to enter the Installer Code.
- At the Technician Code/ID screen, enter your Technician ID and touch **Done**.



- At the Settings menu, select **Home Devices > Keyfobs > Add a Keyfob**. The Locating Keyfobs screen appears.
- Touch Next**. The system scans the premises for Keyfobs that can be added. Keyfobs must be Defaulted and must not be currently paired with another TouchScreen.
- Follow the system prompts to complete the add process and pair the Keyfob with the TouchScreen.
- When the system finds the Keyfob, press and release any button to pair the Keyfob with the TouchScreen.
- The LED will flash  green 5 times. Congratulations! You have successfully added your Keyfob.

4 Deleting a Keyfob

- Deleting a Keyfob from the premises prevents it from being used to perform actions in your security system. You should delete a Keyfob:
- if the Keyfob is being relinquished by the customer.
 - to reset the Keyfob to factory Default settings by deleting the Keyfob and re-adding it to the TouchScreen immediately.
- To delete a Keyfob from the Touchscreen:
- Perform Steps A through C in Section 3: "Adding a Keyfob".
 - At the Technician Settings menu select **Home Devices > Keyfobs > Delete a Keyfob**. The Remove Keyfob screen appears.
 - Touch the Keyfob icon you want to delete.
 - At the confirmation dialog, touch **Yes** to delete the Keyfob from the TouchScreen.

Keyfob Quick Start Guide

HT-KF1 / HT-KF1-W



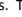 
Congratulations on purchasing your HT-KF1 Keyfob.

The HT-KF1 Keyfob is a professional state-of-the-art product that allows you to arm and disarm your system from anywhere within or just outside your home. Disarming your security system with your Keyfob does not require a key pad code to be entered. The HT-KF1 also provides an emergency alarm function anywhere within range of the TouchScreen.

1 Package Contents

- One HT-KF1 Keyfob with battery (CR2032)
- One Installation Guide


2 Pre-Installation Guidelines

- Slide the battery cover open as shown.
- Remove the clear plastic strip from under the supplied CR2032 3V lithium battery.
- Press and hold the  and  buttons while replacing the battery into the slot (+ side out) and sliding the battery cover closed as shown.
- Release the buttons. The Keyfob is now Defaulted and in Search mode. The LED will flash  green 3 times every 5 seconds. The Keyfob is now ready to be added to the TouchScreen.

3 Adding a Keyfob

- At the Home screen, touch the **Settings** widget.
- At the Settings screen, use the keypad to enter the Installer Code.
- At the Technician Code/ID screen, enter your Technician ID and touch **Done**.



- At the Settings menu, select **Home Devices > Keyfobs > Add a Keyfob**. The Locating Keyfobs screen appears.
- Touch Next**. The system scans the premises for Keyfobs that can be added. Keyfobs must be Defaulted and must not be currently paired with another TouchScreen.
- Follow the system prompts to complete the add process and pair the Keyfob with the TouchScreen.
- When the system finds the Keyfob, press and release any button to pair the Keyfob with the TouchScreen.
- The LED will flash  green 5 times. Congratulations! You have successfully added your Keyfob.

4 Deleting a Keyfob

- Deleting a Keyfob from the premises prevents it from being used to perform actions in your security system. You should delete a Keyfob:
- if the Keyfob is being relinquished by the customer.
 - to reset the Keyfob to factory Default settings by deleting the Keyfob and re-adding it to the TouchScreen immediately.
- To delete a Keyfob from the Touchscreen:
- Perform Steps A through C in Section 3: "Adding a Keyfob".
 - At the Technician Settings menu select **Home Devices > Keyfobs > Delete a Keyfob**. The Remove Keyfob screen appears.
 - Touch the Keyfob icon you want to delete.
 - At the confirmation dialog, touch **Yes** to delete the Keyfob from the TouchScreen.

Keyfob Quick Start Guide

HT-KF1 / HT-KF1-W



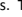 
Congratulations on purchasing your HT-KF1 Keyfob.

The HT-KF1 Keyfob is a professional state-of-the-art product that allows you to arm and disarm your system from anywhere within or just outside your home. Disarming your security system with your Keyfob does not require a key pad code to be entered. The HT-KF1 also provides an emergency alarm function anywhere within range of the TouchScreen.

1 Package Contents

- One HT-KF1 Keyfob with battery (CR2032)
- One Installation Guide

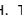 
2 Pre-Installation Guidelines

- Slide the battery cover open as shown.
- Remove the clear plastic strip from under the supplied CR2032 3V lithium battery.
- Press and hold the  and  buttons while replacing the battery into the slot (+ side out) and sliding the battery cover closed as shown.
- Release the buttons. The Keyfob is now Defaulted and in Search mode. The LED will flash  green 3 times every 5 seconds. The Keyfob is now ready to be added to the TouchScreen.

3 Adding a Keyfob

- At the Home screen, touch the **Settings** widget.
- At the Settings screen, use the keypad to enter the Installer Code.
- At the Technician Code/ID screen, enter your Technician ID and touch **Done**.



- At the Settings menu, select **Home Devices > Keyfobs > Add a Keyfob**. The Locating Keyfobs screen appears.
- Touch Next**. The system scans the premises for Keyfobs that can be added. Keyfobs must be Defaulted and must not be currently paired with another TouchScreen.
- Follow the system prompts to complete the add process and pair the Keyfob with the TouchScreen.
- When the system finds the Keyfob, press and release any button to pair the Keyfob with the TouchScreen.
- The LED will flash  green 5 times. Congratulations! You have successfully added your Keyfob.

4 Deleting a Keyfob



- Deleting a Keyfob from the premises prevents it from being used to perform actions in your security system. You should delete a Keyfob:
- if the Keyfob is being relinquished by the customer.
 - to reset the Keyfob to factory Default settings by deleting the Keyfob and re-adding it to the TouchScreen immediately.
- To delete a Keyfob from the Touchscreen:
- Perform Steps A through C in Section 3: "Adding a Keyfob".
 - At the Technician Settings menu select **Home Devices > Keyfobs > Delete a Keyfob**. The Remove Keyfob screen appears.
 - Touch the Keyfob icon you want to delete.
 - At the confirmation dialog, touch **Yes** to delete the Keyfob from the TouchScreen.



Keyfob Quick Start Guide

5 Troubleshooting


- If a Keyfob does not appear to be working properly or is not being located by the TouchScreen during the Add process:
- verify that a new battery has been properly installed (see Section 2: "Pre-Installation Guidelines")
 - confirm that the Keyfob has been Defaulted

6 Button Functionality

 Hold 1½ s	Function	Arm Away
	LED	1 ● red = connected to TouchScreen ● red 3s on = exit delay starting
 Hold 1½ s	Function	Arm Stay
	LED	1 ● amber = connected to TouchScreen ● red 3s on = no exit delay
	Other	7 ● amber = system not ready for arming (door or window is open)

 Hold 1½ s	Function	Disarm
	LED	1 ● green = connected to TouchScreen ● green 3s on = system is disarmed
 Hold 1½ s	Function	Status
	LED	1 ● amber = connected to TouchScreen ● green 3s on = system is disarmed ● red 3s on = system is armed ● amber 3s on = system is not ready

HT-KF1 / HT-KF1-W

 Hold 2¼ s	Function	Panic
	LED	1 ● red = connected to TouchScreen 7 ● red = immediate alarm sent to central monitoring
	Other	3 ● red = out of range with TouchScreen

7 Reset to Factory Default

When a Keyfob is removed from its packaging, it is in factory Default mode. When you install the battery, the Keyfob searches for a TouchScreen to pair with. To Default a Keyfob that has been added to a TouchScreen and place it in Search mode, delete it as described in step 4: "Deleting a Keyfob", then follow Section 2: "Pre-Installation Guidelines".

FCC Statement

This device complies with part 15 of the FCC rules. Operation is subject to the following conditions:

1. This device may not cause harmful interference.
2. This device must accept any interference received, including interference that may cause undesired operation.

FCC ID: Y8R-Z32011

Industry Canada ID: 9488A-Z32011

NOTE: NO CHANGES OR MODIFICATIONS MAY BE MADE TO THE UNITS. ANY CHANGES MADE TO THE UNITS WILL VOID THE USER'S WARRANTY AND AUTHORITY TO OPERATE THE EQUIPMENT.

HT-KF1 Manual revision 01.80



©2012



Keyfob Quick Start Guide

5 Troubleshooting

- If a Keyfob does not appear to be working properly or is not being located by the TouchScreen during the Add process:
- verify that a new battery has been properly installed (see Section 2: "Pre-Installation Guidelines")
 - confirm that the Keyfob has been Defaulted

6 Button Functionality

 Hold 1½ s	Function	Arm Away
	LED	1 ● red = connected to TouchScreen ● red 3s on = exit delay starting
 Hold 1½ s	Function	Arm Stay
	LED	1 ● amber = connected to TouchScreen ● red 3s on = no exit delay
	Other	7 ● amber = system not ready for arming (door or window is open)

 Hold 1½ s	Function	Disarm
	LED	1 ● green = connected to TouchScreen ● green 3s on = system is disarmed
 Hold 1½ s	Function	Status
	LED	1 ● amber = connected to TouchScreen ● green 3s on = system is disarmed ● red 3s on = system is armed ● amber 3s on = system is not ready

7 Reset to Factory Default

When a Keyfob is removed from its packaging, it is in factory Default mode. When you install the battery, the Keyfob searches for a TouchScreen to pair with. To Default a Keyfob that has been added to a TouchScreen and place it in Search mode, delete it as described in step 4: "Deleting a Keyfob", then follow Section 2: "Pre-Installation Guidelines".

FCC Statement

This device complies with part 15 of the FCC rules. Operation is subject to the following conditions:

1. This device may not cause harmful interference.
2. This device must accept any interference received, including interference that may cause undesired operation.

FCC ID: Y8R-Z32011

Industry Canada ID: 9488A-Z32011

NOTE: NO CHANGES OR MODIFICATIONS MAY BE MADE TO THE UNITS. ANY CHANGES MADE TO THE UNITS WILL VOID THE USER'S WARRANTY AND AUTHORITY TO OPERATE THE EQUIPMENT.

HT-KF1 Manual revision 01.80



©2012



Keyfob Quick Start Guide

5 Troubleshooting


- If a Keyfob does not appear to be working properly or is not being located by the TouchScreen during the Add process:
- verify that a new battery has been properly installed (see Section 2: "Pre-Installation Guidelines")
 - confirm that the Keyfob has been Defaulted

6 Button Functionality

 Hold 1½ s	Function	Arm Away
	LED	1 ● red = connected to TouchScreen ● red 3s on = exit delay starting
 Hold 1½ s	Function	Arm Stay
	LED	1 ● amber = connected to TouchScreen ● red 3s on = no exit delay
	Other	7 ● amber = system not ready for arming (door or window is open)

 Hold 1½ s	Function	Disarm
	LED	1 ● green = connected to TouchScreen ● green 3s on = system is disarmed
 Hold 1½ s	Function	Status
	LED	1 ● amber = connected to TouchScreen ● green 3s on = system is disarmed ● red 3s on = system is armed ● amber 3s on = system is not ready

HT-KF1 / HT-KF1-W

 Hold 2¼ s	Function	Panic
	LED	1 ● red = connected to TouchScreen 7 ● red = immediate alarm sent to central monitoring
	Other	3 ● red = out of range with TouchScreen

7 Reset to Factory Default

When a Keyfob is removed from its packaging, it is in factory Default mode. When you install the battery, the Keyfob searches for a TouchScreen to pair with. To Default a Keyfob that has been added to a TouchScreen and place it in Search mode, delete it as described in step 4: "Deleting a Keyfob", then follow Section 2: "Pre-Installation Guidelines".

FCC Statement

This device complies with part 15 of the FCC rules. Operation is subject to the following conditions:

1. This device may not cause harmful interference.
2. This device must accept any interference received, including interference that may cause undesired operation.

FCC ID: Y8R-Z32011

Industry Canada ID: 9488A-Z32011

NOTE: NO CHANGES OR MODIFICATIONS MAY BE MADE TO THE UNITS. ANY CHANGES MADE TO THE UNITS WILL VOID THE USER'S WARRANTY AND AUTHORITY TO OPERATE THE EQUIPMENT.

HT-KF1 Manual revision 01.80



©2012



Keyfob Quick Start Guide

5 Troubleshooting

- If a Keyfob does not appear to be working properly or is not being located by the TouchScreen during the Add process:
- verify that a new battery has been properly installed (see Section 2: "Pre-Installation Guidelines")
 - confirm that the Keyfob has been Defaulted

6 Button Functionality

 Hold 1½ s	Function	Arm Away
	LED	1 ● red = connected to TouchScreen ● red 3s on = exit delay starting
 Hold 1½ s	Function	Arm Stay
	LED	1 ● amber = connected to TouchScreen ● red 3s on = no exit delay
	Other	7 ● amber = system not ready for arming (door or window is open)

 Hold 1½ s	Function	Disarm
	LED	1 ● green = connected to TouchScreen ● green 3s on = system is disarmed
 Hold 1½ s	Function	Status
	LED	1 ● amber = connected to TouchScreen ● green 3s on = system is disarmed ● red 3s on = system is armed ● amber 3s on = system is not ready

7 Reset to Factory Default

When a Keyfob is removed from its packaging, it is in factory Default mode. When you install the battery, the Keyfob searches for a TouchScreen to pair with. To Default a Keyfob that has been added to a TouchScreen and place it in Search mode, delete it as described in step 4: "Deleting a Keyfob", then follow Section 2: "Pre-Installation Guidelines".

FCC Statement

This device complies with part 15 of the FCC rules. Operation is subject to the following conditions:

1. This device may not cause harmful interference.
2. This device must accept any interference received, including interference that may cause undesired operation.

FCC ID: Y8R-Z32011

Industry Canada ID: 9488A-Z32011

NOTE: NO CHANGES OR MODIFICATIONS MAY BE MADE TO THE UNITS. ANY CHANGES MADE TO THE UNITS WILL VOID THE USER'S WARRANTY AND AUTHORITY TO OPERATE THE EQUIPMENT.

HT-KF1 Manual revision 01.80

©2012